

# String Cord Universal

Art.Nr. 379

- 1. Change the length of the string cord appropriate to your bow size. Make sure that the knots are tight.**
- 2. First put the leather case over the lower end of the bow. Please make sure that the string lies exactly in the notch of the bow tip.**
- 3. Now put the other leather case over the tip of the upper end. It is important that the notch of the string is free.**
- 4. Put both feet on the stringer and pull up the bow until the string of the bow slides into the notch of the bow tip.**



**To unstring the bow just do these steps the other way round.**

**BY BEIER GERMANY**

[www.bogensport-beier.de](http://www.bogensport-beier.de)